


BR 13x-3

Side step MA 200373



For easy installation of the **side step MA 200373** supplied in the kit, first remove the pre-assembled nuts and washers in the side door area.

Then take the step, put it on from the bottom and screw it on with the correct torque.

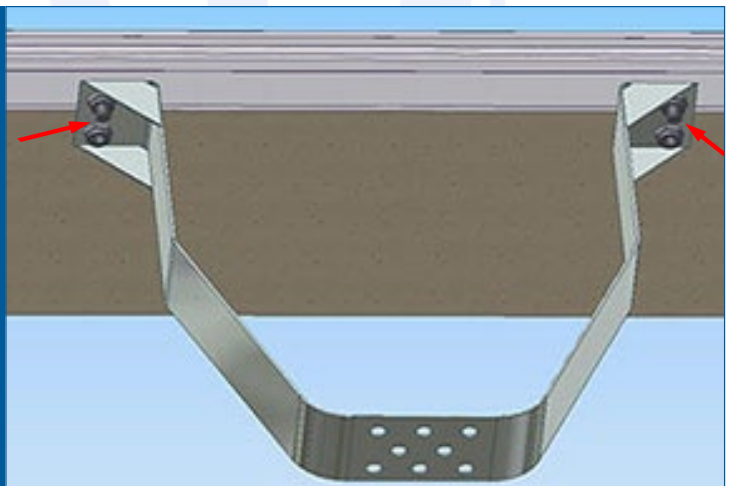

AluTeam Fahrzeugtechnik GmbH
Brockhagener Straße 88, D-33649 Bielefeld
Tel. + 49 (0)521 - 41 73 11 - 0; Fax - 90
E-Mail: info@aluteam.de / www.aluteam.de

AluTeam Fahrzeugtechnik Wolfhagen GmbH
Hans-Böckler-Straße 4, D-34466 Wolfhagen
Tel. + 49 (0)56 92 - 609 - 0; Fax - 38
E-Mail: wolfhagen@aluteam.de / www.aluteam.de

03.21